




Bowers and Wilkins T7 Battery Replacement

Replace the battery for a Bowers and Wilkins T7 Bluetooth Speaker.

Written By: Bertrand Plummer

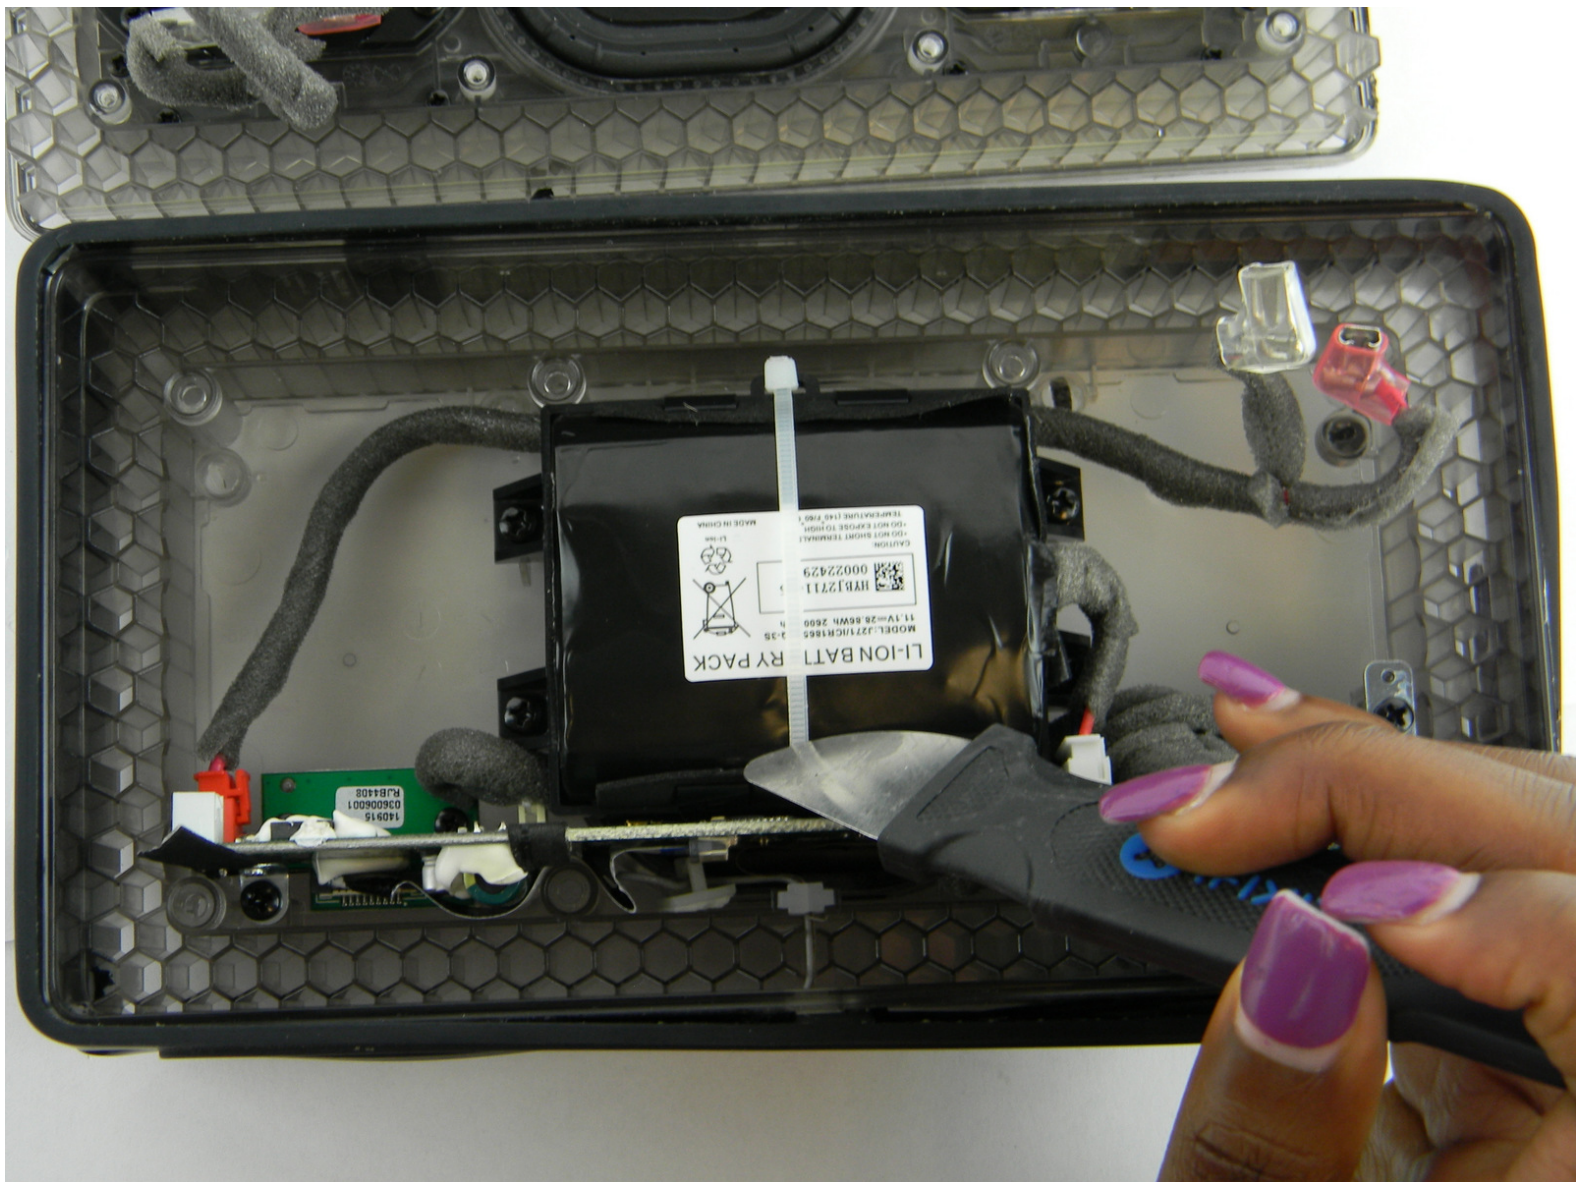

INTRODUCTION

Use this guide to learn how to replace your battery for the Bowers and Wilkins T7 Bluetooth Speaker.



TOOLS:

- [JIS Driver Set](#) (1)
 - [Tweezers](#) (1)
 - [Jimmy](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Access Panel



⚠ As with all electronic devices, make sure your device is powered off before you begin.


- Gently lift up the access panel; it should easily "pop" open.


Step 2




- Remove 14mm screws on the front panel with a J1 Phillips head screwdriver.
- There are 8 screws in total.

Step 3


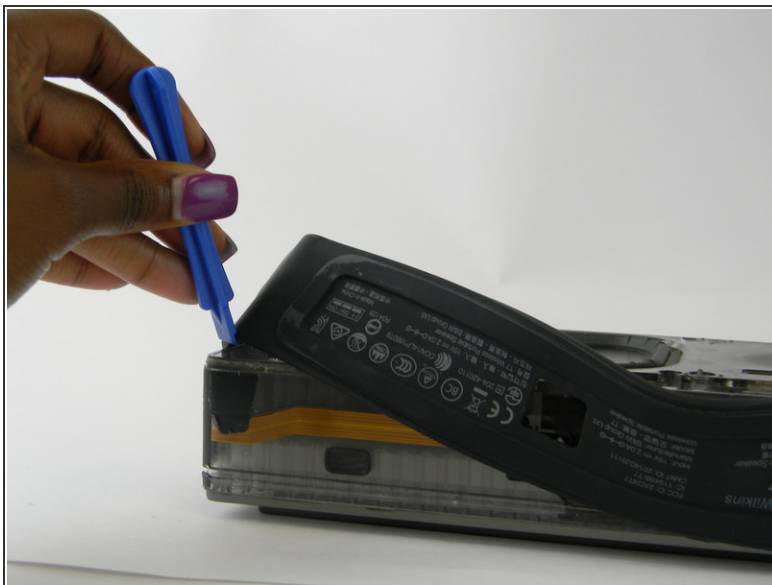


 Be gentle, the rubber seal is fragile and easy to tear, resulting in cosmetic damage to your device.

- Using the ifixit Opening Tool, carefully pry off the rubber seal around the sides.


 The seal is held by adhesive, if this is proving difficult you can use a heat gun to help the process.

Step 4

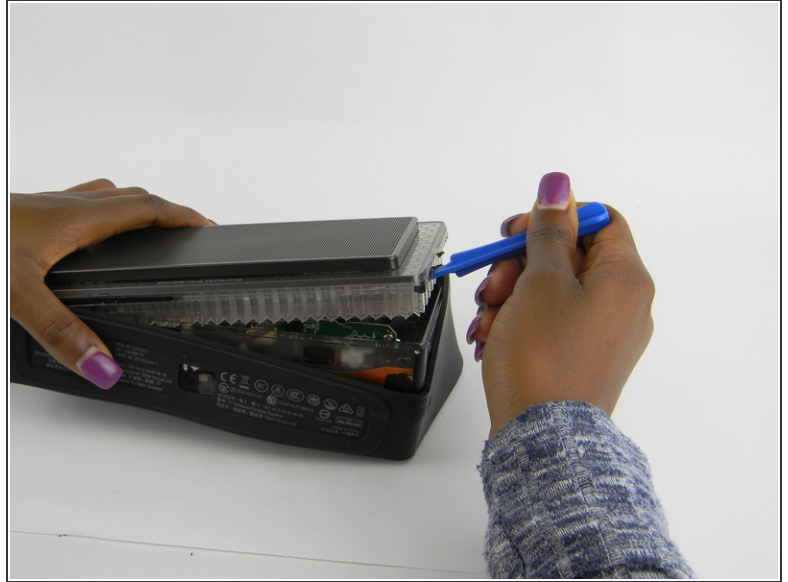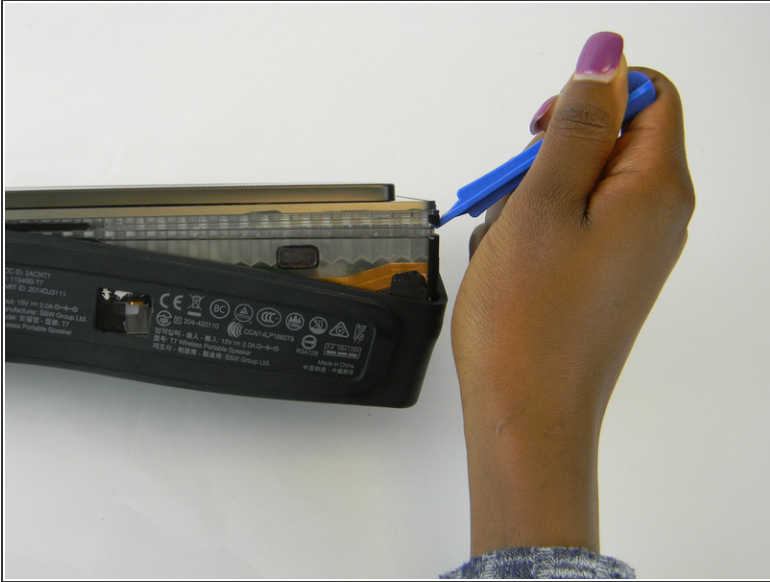


- i** The cover is the most difficult part to remove. As you work, pry continuously, moving the tool around the device, working it a little further as you go.
- Using the iFixit Opening Tool, pry open at the seam found under the rubber seal.
 - As the cover starts to come off, you can lift up using your hand.

Step 5

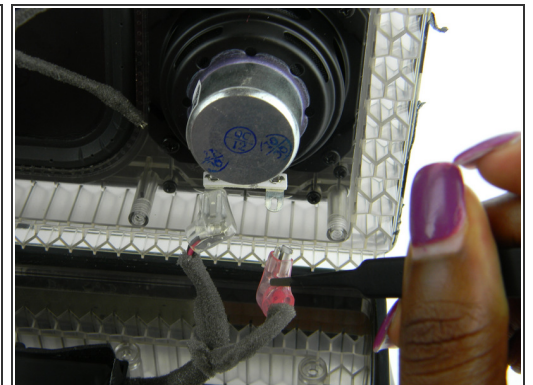



- Gently squeeze the internal locking mechanism inside the red and white terminals with either your fingers or a pair of precision tweezers.
- While squeezing the internal locking mechanism, pull back the terminal.
- Repeat this process for the second speaker.

Step 6 — Battery

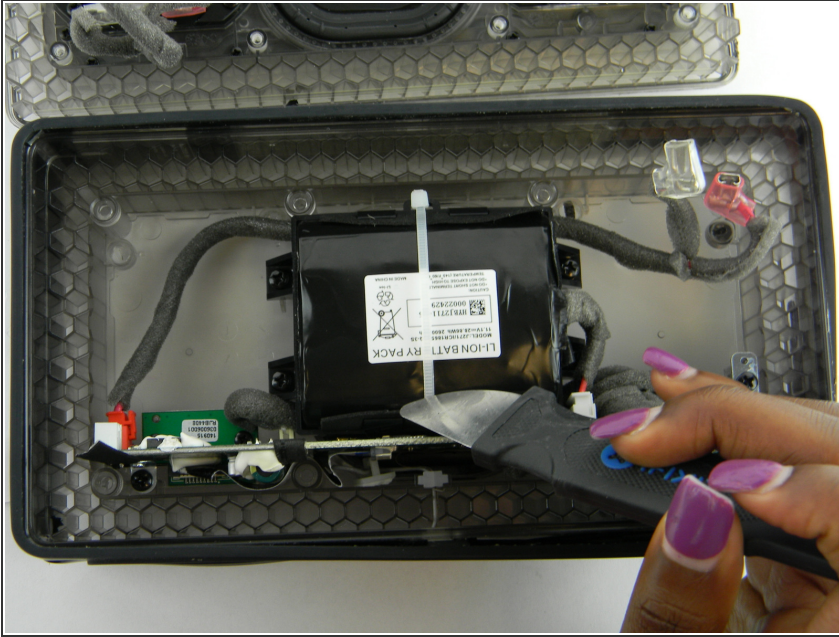



- Using a cutting tool such as a Jimmy steel blade or wire cutter, cut the cable tie surrounding the battery.
- ⚠ Be careful not to damage the battery while cutting the cable tie surrounding the battery.

Step 7

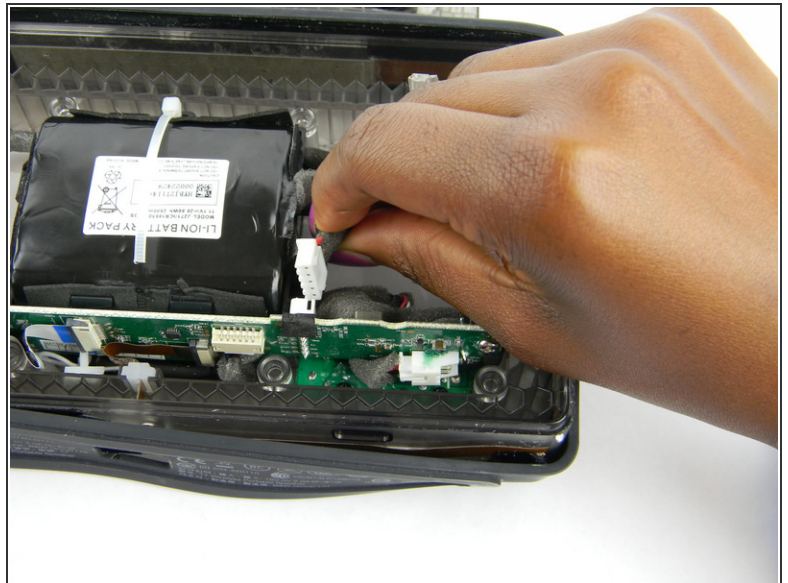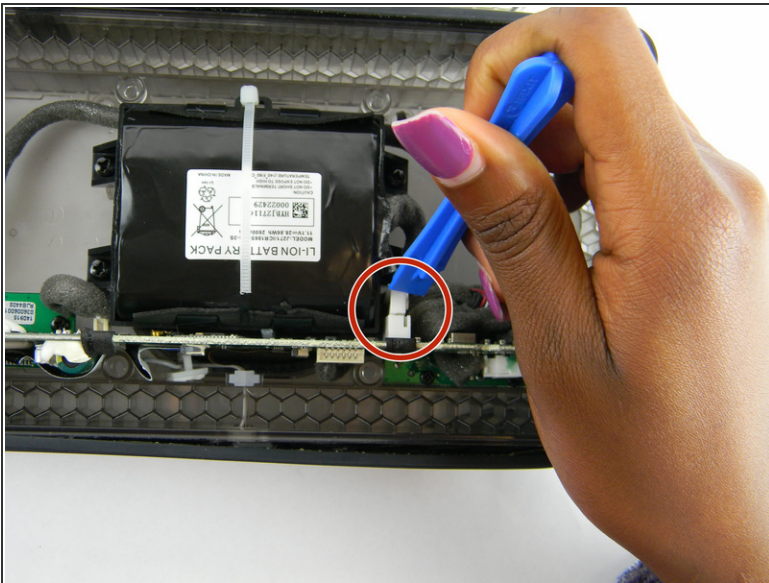

- Using the iFixit Opening Tool, pry out the battery power supply connector.
- Pull and remove the battery power supply connector.

Step 8

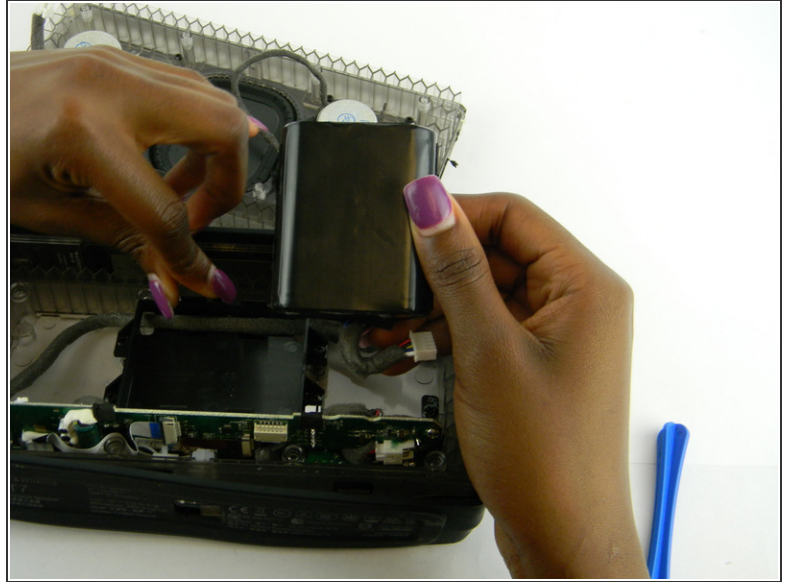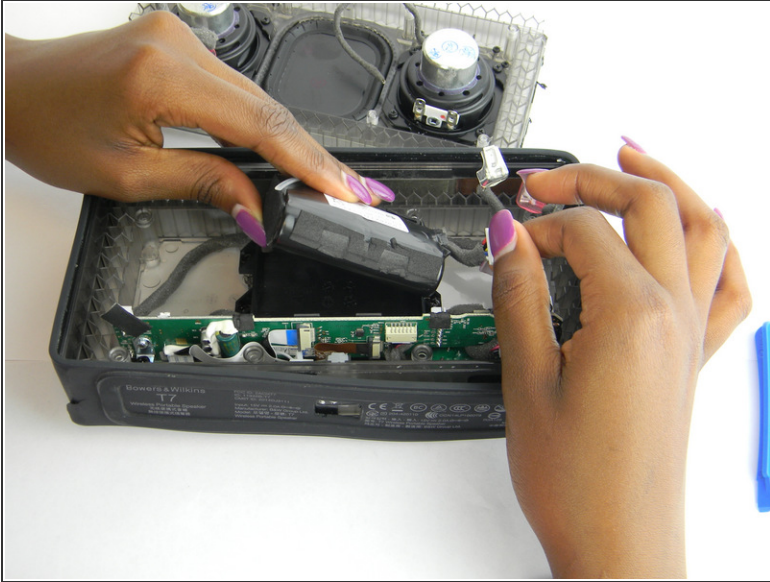

- After disconnecting the power supply connector, pull the battery out of its case.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 06:53:06 AM.